

# Vent Adapter - Installation Instructions

Part #TPVNT-7

Model: OUTFITTER-II





## Included in kit:

- (1) Top Vent Adapter Assembly (C1)
- (1) #26 Drill Bit (C2)
- (6) 8-32 x 3/8 inch Screws (C3)

## Tools Required:

- Powered Drill
- Phillip Head Screw Driver
- High Temperature Silicone (500°F).

## Included in Kit:

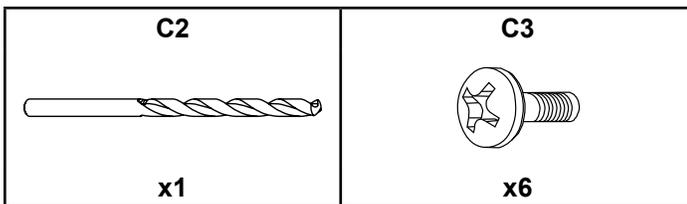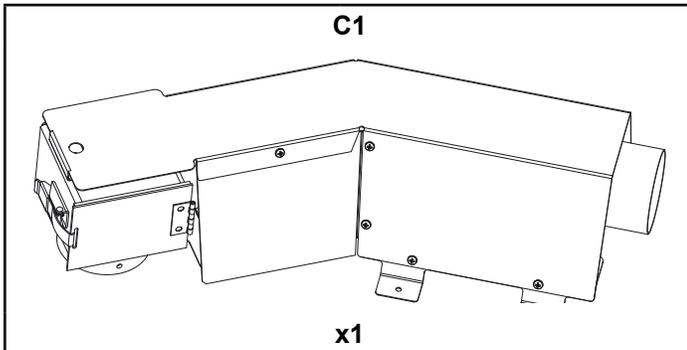

## Installing the Top Vent Adapter

1. Put a layer of high temperature silicone on the 3 inch (76mm) exhaust outlet. Do not put silicone inside of pipe (Figure 1).

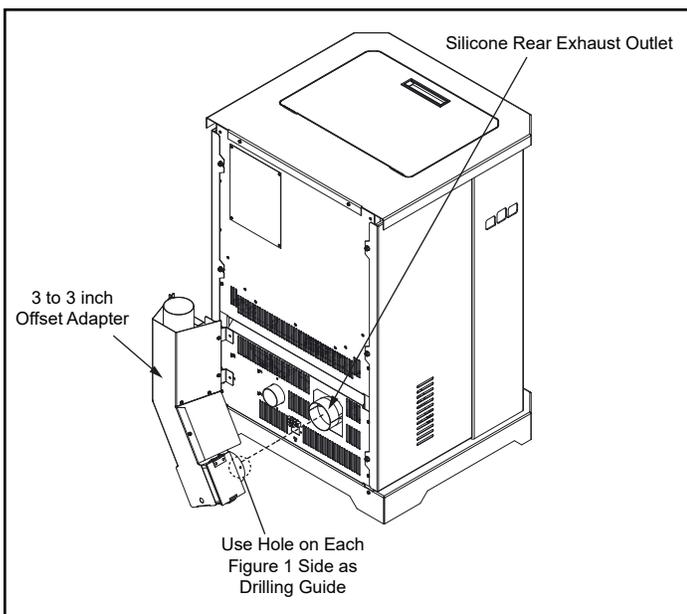


Figure 1

2. Slide the Top Vent Adapter Assembly (C1) onto the rear exhaust outlet and adjust the assembly to a vertical position (Figure 1).
3. Drill four (4) holes with #26 Drill Bit (C2) into the back of the appliance using the outer shield as a pattern (make sure the assembly is vertical) (Figure 2).

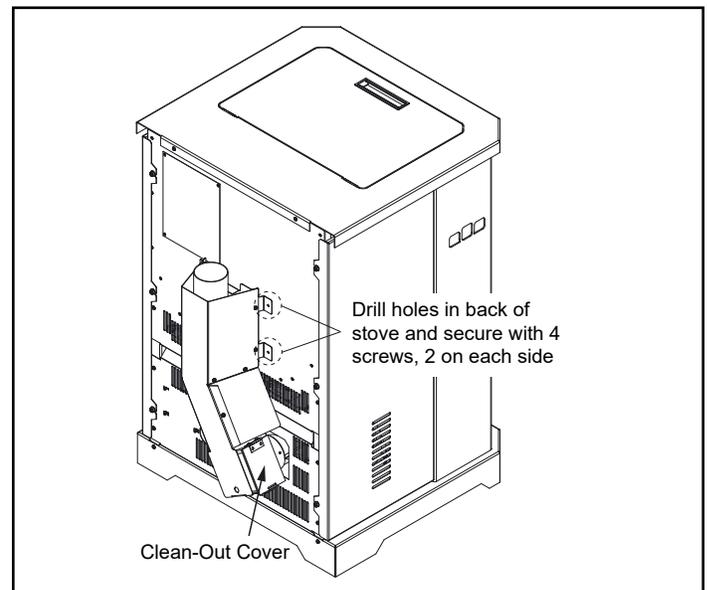


Figure 2

4. Install four (4) mounting 8-32 x 3/8 inch Screws (C3) using a Phillips head screwdriver.
5. Drill two (2) holes with #26 Drill Bit (C2) through the rear exhaust outlet using the two (2) holes already in the short horizontal pipe in the Top Vent Adapter Assembly (C1) as a guide. Install with two (2) 8-32 x 3/8 inch Screws (C3) (Figure 1 on page 1).
6. Install the vent pipe into the Top Vent Adapter Assembly (C1) (be sure to silicone all joints).

**NOTE:** Appliance adapter from venting manufacture may be required.

**NOTICE:** Do not apply silicone inside appliance exhaust outlet.

7. To clean the Top Vent Adapter Assembly (C1) open the clean-out cover (Figure 2).