


# CW50-501 TRADITIONAL LOG SET

For use with model #CLW-50

**NOTE:** Log numbers are located on the bottom of each log. Refer to the following directions for proper placement. Your components may look different than the ones shown.

**IMPORTANT: PROPANE INSTALLATIONS ONLY** - When using 903-LAVA with minimum venting you may have to remove up to 1 lb. of lava rock. When using 304-BLK or 304-COP with minimum venting you may have to remove up to 1/2 lb. of crushed glass.

1. Install the log placement bracket. The bracket is etched with a "T" to show the topside of the bracket. Remove the two screws from the burner as shown below. Install the bracket with the "T" showing and using screws previously removed.
2. Place logs CW50-L1 and CW50-L2 as shown, with the notches facing inwards.
3. Remove and save the log placement bracket.
4. Place log CW50-L4 as shown below and aligned with the notch in log CW50-L1.
5. Place log CW50-L6 as shown below and aligned with the notch in log CW50-L7.
6. Place the rest of the logs as shown.
7. Use a stiff or steel bristle brush to distribute rockwool onto the logs and burner.

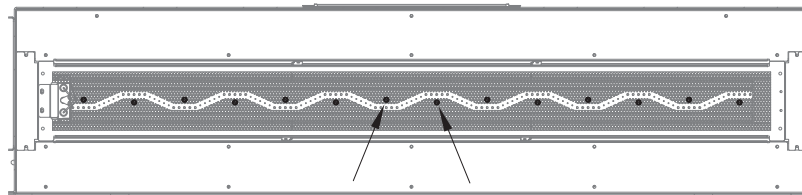

REMOVE AND SAVE (2) SCREWS FOR LOG PLACEMENT BRACKET

Figure 1, Log Placement Bracket

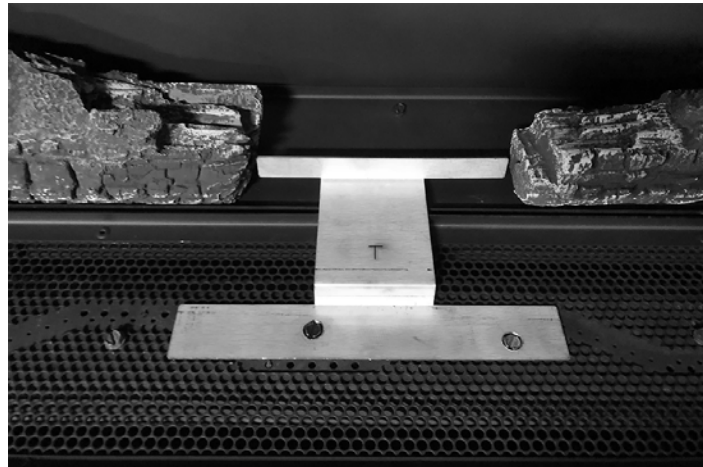


Figure 2, Log Bracket Installed

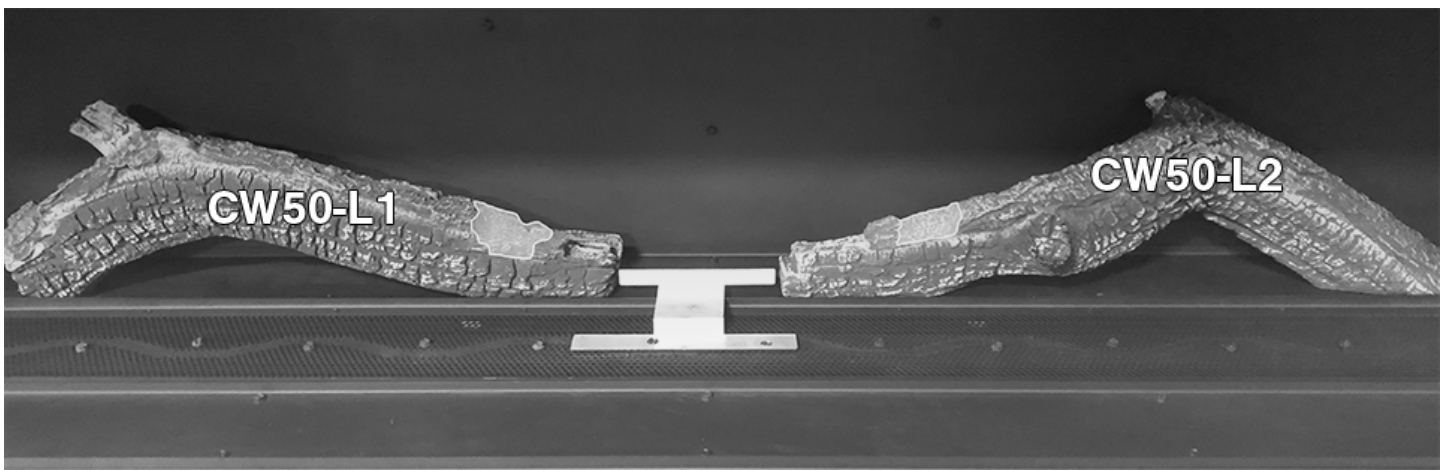


Figure 3, Rear Logs Installed



Figure 4, Log Set Installed